

Step 1 - Firstly, determine the distance from the top of the door where the first hole is required.

Step 2 - Then determine the distance from the side of the door where the fist hole is required.




Step 3 - Using either a 2 mm pilot drill bit or an awl, mark the door where the first hole is required.

Step 4 - For a standard hole centre, simply read off the scale the desired hole centres and mark the door with the position of the second hole.



Step 5 - The jig is now set up for all doors in the kitchen and each door can quickly be marked out ready for drilling.

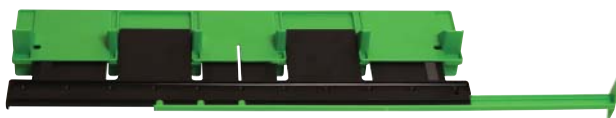

Tools

11

A Door handle jig

- Simple jig which accurately marks out door and drawer fronts in preparation for fixing handles and knobs
- Green/black plastic

| | |
|-----------------|------------|
| | Cat. No. |
| Door handle jig | 001.35.030 |

Order qty: 1 pc

TCH-FF 2010, HUK. Dimensional data not binding. We reserve the right to alter specifications without notice.