



Auto Seal ( Ref:1.01.016.)

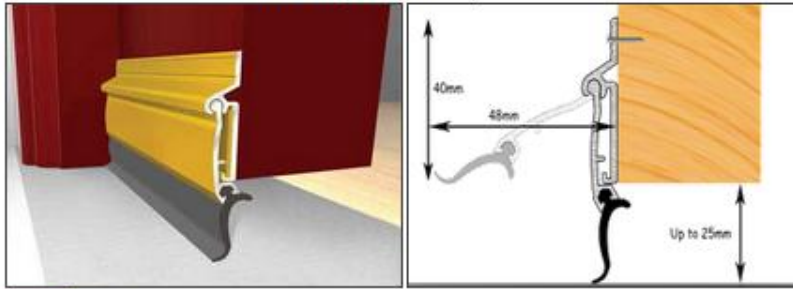


General Fitting Instructions CAD

Fitting Instructions:

- Remove rubber seal from aluminium. Check width between outside faces of the doorframe rebate and cut aluminium section to this

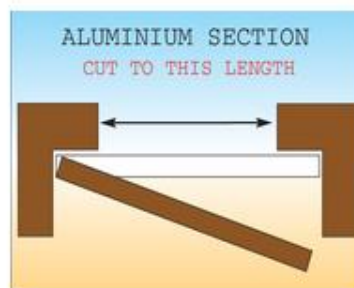

- Cut rubber seal to length of aluminium reinsert in groove. Pinch one end of seal to retain seal in place.
- With door in closed position place the flat against the face of door with the floor to provide a weather tight seal, points and screw in place.
- Fix the grey button and screw provided lockside of the doorframe. See illustration

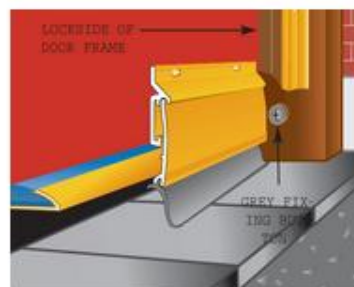

Other Details:



Elements of Accessibility