



General Fitting Instructions CAD

Fitting Instructions:

- Remove rubber seal from Aluminium sill section. Check width between outside faces of the doorframe rebate and cut aluminium section to this size.

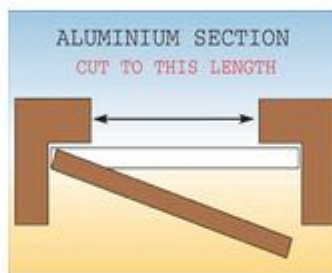

- Cut the rubber seal longer than aluminium section to allow seal to extend into the kwikfit lugs and re-insert into the groove in sill. Attach kwikfit lugs to each end of the sill.
- This sill requires an underdoor clearance of 25mm. If necessary, remove door and trim to allow for this, ensuring bottom of door is smooth to avoid damage to rubber seal.

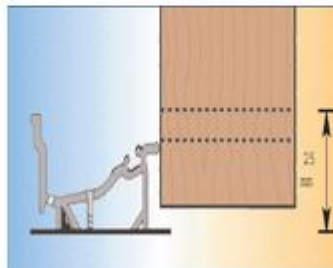

- Position the assembled sill between the doorframe and mark fixing points through countersunk holes. Remove sill, drill fixing holes and insert plugs.
- Apply sealing compound to underside groove at back of the sill around kwikfit lugs. Ensure rubber seal at front is in place and screw sill into place.

Other Details:



Elements of Accessibility